

Micro inclined pressure reducing valves for special applications

© Copyright 2019 Caleffi

533...H series

Installation, commissioning and servicing instructions

Function

Pressure reducing valves are devices which, when installed on private water systems, reduce the pressure entering from the public mains.

The typical applications of these micro pressure reducing valves are water and drink dispensers and coffee machines.

The Caleffi 533...H series meets the requirements of "AS 1357.2:2005 Valves primarily for use in warm and hot water systems - P. 2: Control valves".

Product range



Code 533430H AUS
DN 10 (3/8")



Code F0002665
(optional)



AS 1357.2
C of C 02467



Technical specifications

Materials

Body:	Low lead dezincification resistant alloy CR EN 12165 CW724R
Cover:	PA6G30
Control stem:	Low lead dezincification resistant alloy CR EN 12165 CW724R
Spring:	steel EN 10270-1
Cartridge:	PPSG40
Diaphragm:	EPDM
Seals:	EPDM
Strainer:	stainless steel EN 10088-2 (AISI 304L)

Performance

Max. pressure upstream:	1600 kPa
Downstream pressure setting range:	80–400 kPa
Factory setting:	300 kPa
Mesh size:	Ø 0,2 mm
Max. working temperature:	80°C
Medium:	water
Complies with:	AS 1357.2


Connections

3/8" F (DN 10) (ISO 7/1)

Pressure gauge:

1/4" F (ISO 228-1)

Dimensions

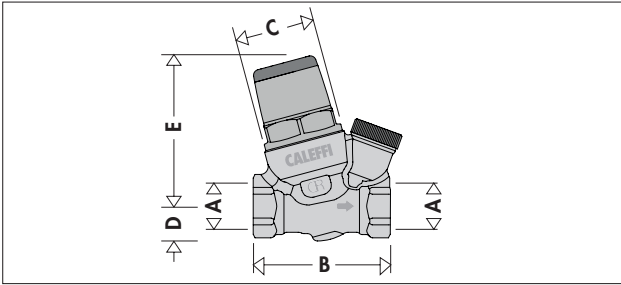


Code	DN	A	B	C	D	E	Mass (kg)
533430H AUS	10	3/8"	52	Ø32	14	57,5	0,19

Pressure drop diagram

Under following conditions:

- Inlet pressure 800 kPa
- Outlet set pressure 300 kPa

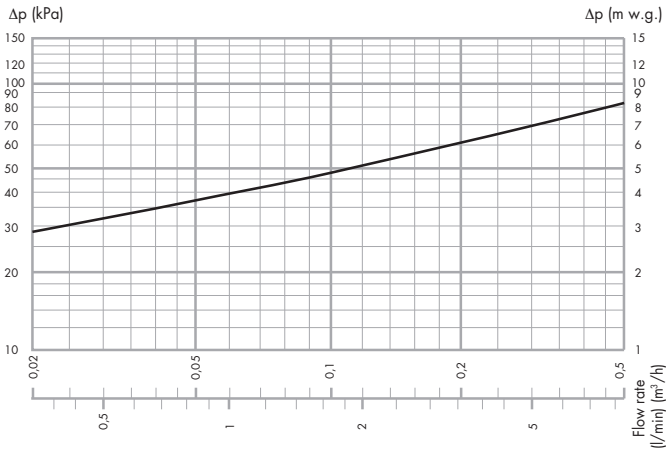

Flow rate (AS 1357.2):

DN 10	
10 l/min	@ 80 kPa
35 l/min	@ 300 kPa
40 l/min	@ 400 kPa


Installation

The pressure reducing valve must be installed by a licensed plumber and in accordance with AS/NZS 3500, relevant local requirements and following these instructions.


The installer must:

- ensure the reducing valve is compatible with any other equipment in the system it may interact with or come into contact with logistically;
- assess and acknowledge all hazards related to the use of the product, including leaks, by installing the unit properly;
- install shut-off valves fitted with pressure ports or similar equipment to measure the upstream pressure.


Installation diagram

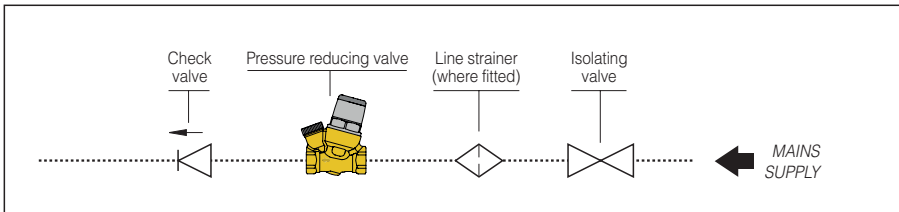

Application diagrams

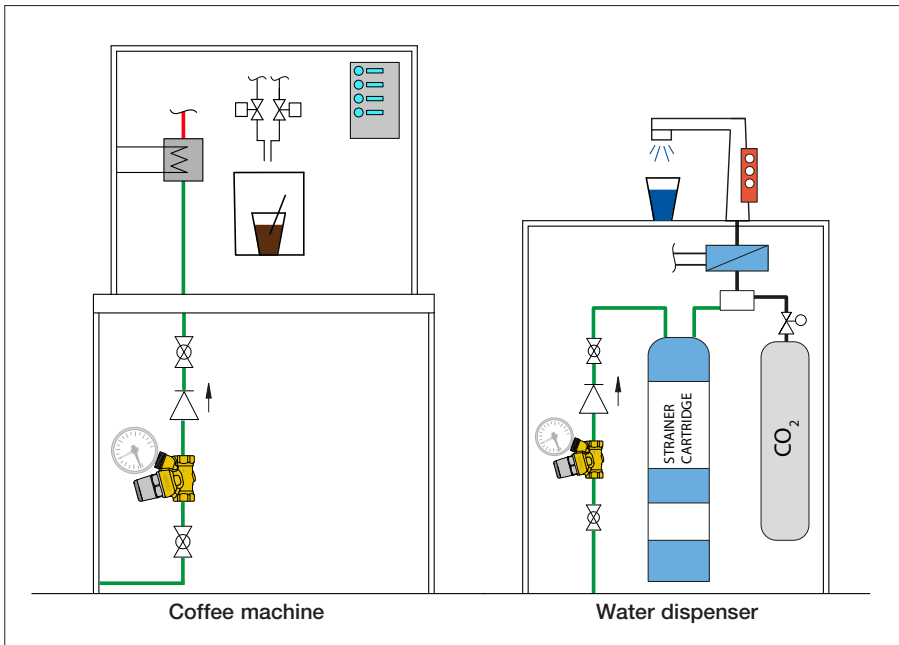

Recommendation for installation conditions

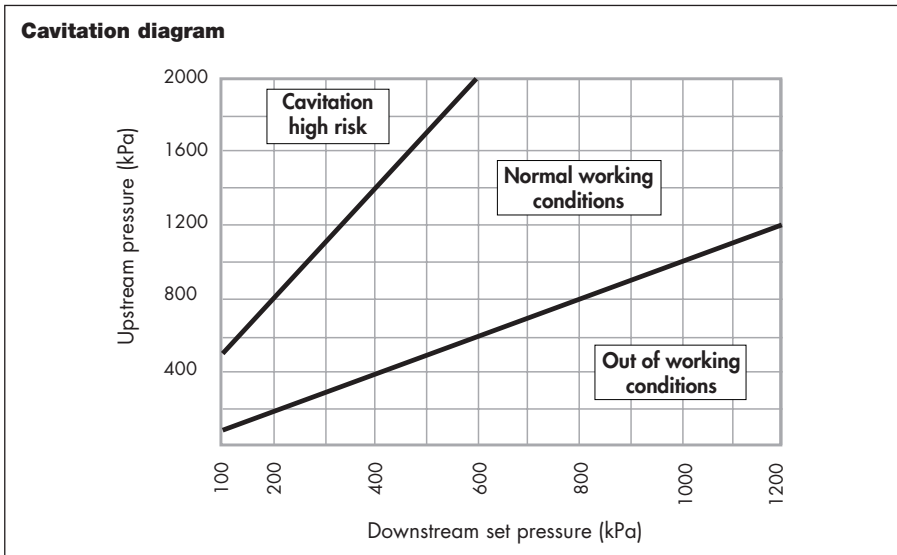

To minimize the risk of cavitation within the valve that may result in malfunctioning with erosion of valve sealing area, vibrations and noise, it is highly recommended to refer to the working conditions represented in the above diagram.

Due to the numerous factors and variable conditions experienced such as system pressure, water temperature, air presence, flow rate and velocity, which may affect the behavior of the pressure reducing valve, it is advisable that the pressure ratio between the upstream pressure and the downstream set pressure is kept ideally to a value 2:1 and no greater than a value of 3:1. (For example, upstream 1000 kPa, set pressure 500 kPa, the pressure ratio = $1000/500 = 2:1$). In these conditions, the possible risk of cavitation and malfunctioning is minimised, however this does not exclude the possible effects of the many other variables within the system under operating conditions. If the pressure ratio exceeds the indicated limit, the system design pressure or use of 1st stage pressure reducing valves shall be reviewed. (For example, 1st stage reducing pressure from 1600 to 800 kPa and then 2nd stage from 800 to 400 kPa).

Pipework upstream and downstream of the pressure reducing valve shall be supported in accordance with the manufacturer's instructions, AS/NZS 3500 along with any other local authority requirements, to avoid the creation and transfer of vibration and/or noise into the installation.

The inlet strainer of the pressure reducing valve shall be periodically checked and cleaned, to minimize any partial or complete blockage which may limit the flow rate from the valve and/or create noise.

System flushing, cleaning and disinfection of the pipework to which the valve is installed shall be performed by suitably qualified persons in accordance with the system component manufacturer's instructions, AS/NZS 3500 along with any other applicable local authority requirements. Exceeding the maximum stated chemical concentrations and/or duration of exposure may negatively impact on the performance of the system and/or components installed such as the pressure reducing valve. Chemical dosed products must be chemically compatible with materials used for the construction of the pressure reducing valve, specified in its technical documentation.

Water hammering

This is one of the main problems which may affect pressure reducing valves. It is best to fit special devices to absorb water hammering when fitting pressure reducing valves in systems at risk.


WARNING:



If it is **critical** to maintain the downstream pressure setting to protect equipment, as a safety measure, we recommend that a pressure, or safety, relief valve is installed downstream of the pressure reducing valve.

Setting




1. Flush the system.
2. Install the pressure reducing valve either vertically or horizontally, not upside down, paying attention to the "direction of flow" indicator on the body of the valve.
3. Caleffi 533...H series pressure reducing valves are factory set at 300 kPa.
4. If required, reset the pressure by turning the screw on the top of the plastic cover. Turn it clockwise to increase the pressure and anticlockwise to decrease it.

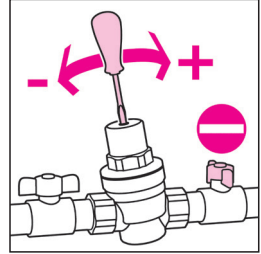

Maintenance

The reducing valve must be checked and serviced in compliance with applicable regulations. Even when installed, commissioned and serviced properly, the reducing valve's internal components are subject to normal wear and tear, which may result in leaks and other malfunctions. We advise that you check that it is in good working order and service and clean the cartridge at least every 12 months. Proceed as follows for periodic cleaning of the strainer and inspection of the cartridge:

- 1 Turn off upstream water supply to the pressure reducing valve and open an outlet downstream to relief pressure
- 2** Unscrew (anticlockwise) the setting screw to decompress the spring inside.
- 3** Unscrew the cover.
- 4** Extract the cartridge with the aid of pincers to grip the head of the screw.
- 5 After inspection and cleaning, refit the cartridge or, alternatively, fit a replacement cartridge (cover tightening torque: 20 ± 2 N·m).
- 6 Reset the valve (see *Setting*).

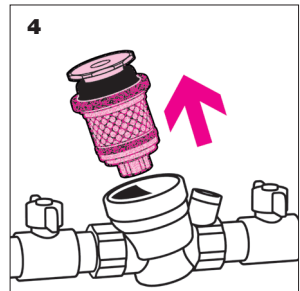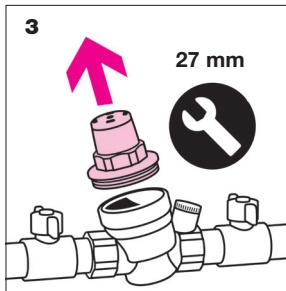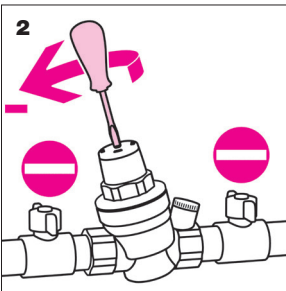

Trouble-shooting

1. Increased downstream pressure near a water heater

This problem is due to the water being heated by the water heater. There is no relief of the pressure because the reducing valve is correctly closed. The solution is to install an expansion vessel (between the heater and the reducer) to "absorb" the pressure increase.

2. The pressure reducing valve does not maintain its set pressure

In most cases this is the result of impurities that deposit on the valve seat causing leakage with a resulting increase in pressure downstream. The solution is to fit a filter upstream from the reducer and subsequently to maintain and clean the cartridge (see *Maintenance*).

Safety



If the pressure reducing valve is not installed, commissioned and maintained properly in accordance with the instructions contained in this manual, it may not operate correctly, and may cause damage to objects and/or persons.

Make sure that all the connections are water-tight.

When installing the pressure reducing valve, make sure not to over-tighten the connections to the valve as, over time, a failure can occur with subsequent water leakage causing damage.

Water temperatures higher than 50°C may cause severe burns. When installing, commissioning and maintaining the device, take the necessary precautions so that these temperatures will not endanger people.

In the case of highly aggressive water, arrangements must be made to treat the water before it enters the pressure reducing valve, in accordance with current legislation. Otherwise, the pressure reducing valve may be damaged and not function correctly.

Leave this operating manual with the user

AUSTRALIAN AGENT

All Valve Industries

**Unit 2, 18-28 Sir Joseph Banks Drive
Kurnell NSW 2231**

Ph: (02) 8543 9811

Fax: (02) 8543 9822

Email: info@allvalve.com.au